



## **Parking Brake Handle & Cable Installation Instructions for Two Piece Fender Brackets**


1. Remove cable housing and ferules from brake cable.

2. Thread the cable through hole in parking brake handle clevis.

3. Bolt parking brake handle to handle bracket with supplied 5/16" - 18 x 1 1/2" bolts and lock nut.

4. Slide cable housing over cable and locate front housing end in housing locator on the handle bracket.


**This is very important helps determine the length of the cable.**

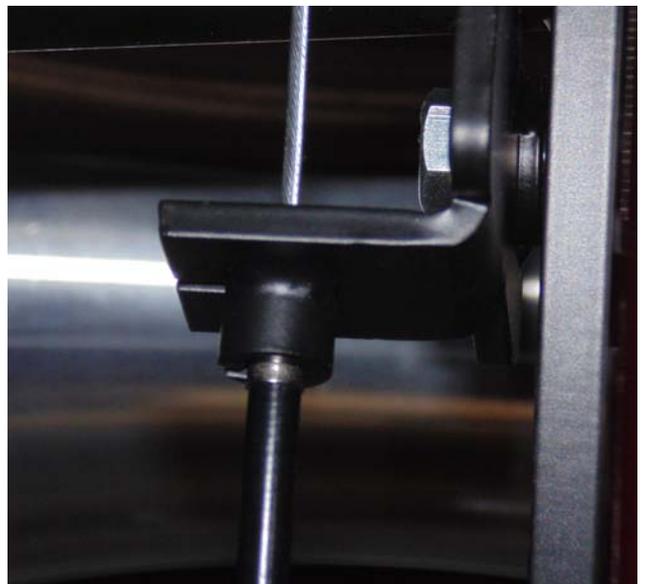



## Parking Brake Handle & Cable Installation Instructions

5. Bolt the parking brake handle and bracket to the fender bracket with the supplied 3/8" - 16 x 2 3/4" hex head bolt.. Route cable and housing trough stainless steel bracket on caliper. Keep a smooth arc, Do not crimp housing.

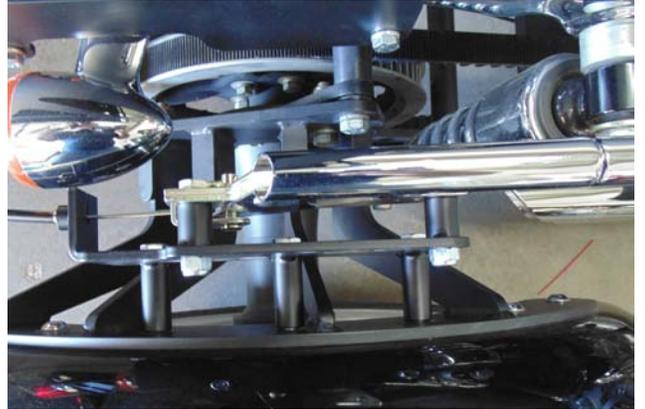

6. Mark the length of the housing. Cable needs to be longer than the housing. **Do not cut the cable now. Remove housing from the cable.** Use an abrasive cut off wheel to cut the housing. **Do not Smash the housing**



7. Install cable clevis on caliper actuator lever.





## **Parking Brake Handle & Cable Installation Instructions**

8. Slide cable housing over cable and locate front housing end in housing locator on the bottom of the swing arm cross member. Slide threaded adjuster and nut over cable, install through stainless steel bracket on caliper.



9. Install spring over cable, thread cable through cable clevis. Make sure that the cable adjuster is bottomed out. (no threads showing on the back side of the bracket as shown in picture) Hold lever forward with your thumb, pull cable snug around clevis. Wrap electrical tape around cable where you want to cut the cable. Leave enough extra cable so you can get a good grip.





10. Pull cable out of clevis, remove spring and adjuster. Cut cable with abrasive cut off wheel in the center of the electrical tape so the cable won't fray.





## **Parking Brake Handle & Cable Installation Instructions**

11. Reinstall the adjuster and spring over cable. Thread the cable through the clevis, pull cable tight. Make sure the cable housing ends are in their locations. Tighten the clevis bolt to clamp the cable.

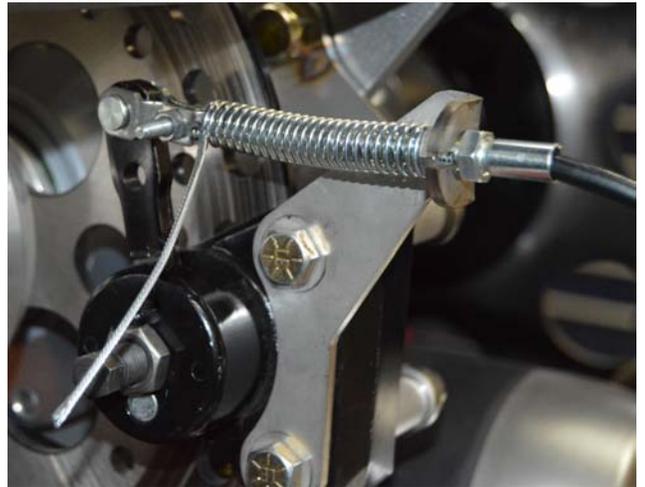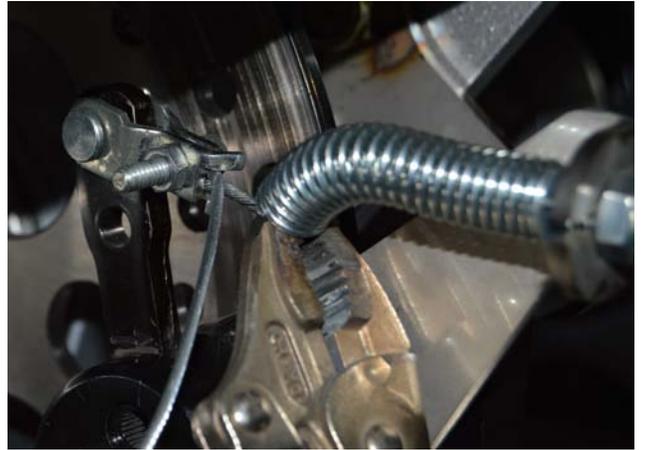

12. Use the cable adjuster to take up the slack in the housing. Lift the parking brake handle to test the brake. Adjust until the parking brake holds. Release the handle and make sure the caliper releases.





## **Parking Brake Handle & Cable Installation Instructions**

13. Tighten both jam nuts.

