



1. Compress pistons by pressing in brake pads away from rotor (very important as new brakes will not slide in easily)
2. Remove C clip located on backside of caliper retainer bolt

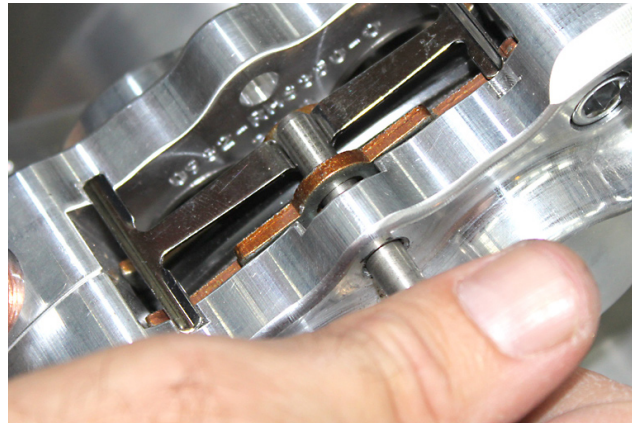

3. Remove brake pad retainer bolt (brakes should fall out)

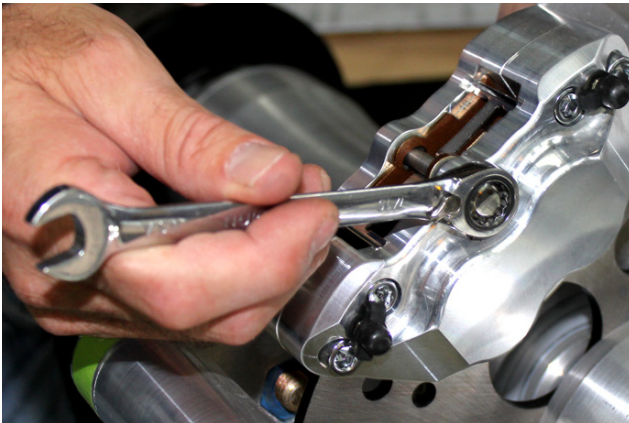

4. Insert new brake pads from the bottom of caliper
5. Reinstall brake pad retainer bolt and C clip

